

# Intumescent Fitting Instruction

FOR RUTLAND LETTERPLATE - FD30

Intumescent Code: RLP.IP




1



Take the letterplate from the box and separate the INTERNAL SIDE in preparation to apply the intumescent wrap.

2

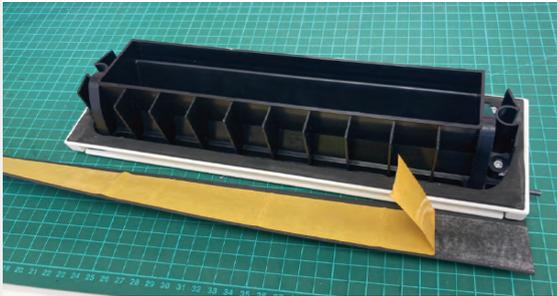

Remove the release paper from one end of one piece of intumescent wrap as shown.

3



Apply the intumescent wrap, starting from the ribbed bottom area, as highlighted in RED circle. Remove the rest of the release paper and apply the intumescent tightly around the letterplate sleeve.

4



Apply the second intumescent wrap as highlighted, ensuring a neat joint as shown - and continue to wrap fully around the sleeve.

5



Ensure there are 3 layers of intumescent on the bottom ribbed section of the sleeve. Now continue the installation from Point 3 in the fitting instruction

# Intumescent Fitting Instruction

FOR RUTLAND LETTERPLATE - FD60

Intumescent Code: RLP.IP60




1



Take the letterplate from the box and separate the INTERNAL SIDE in preparation to apply the intumescent wrap.

2

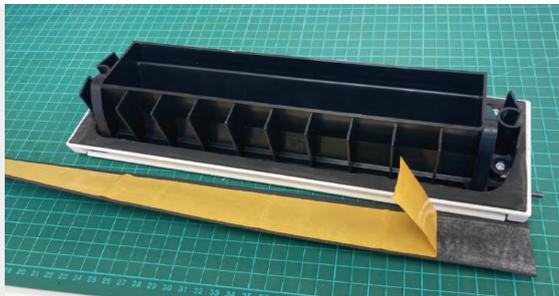

Remove the release paper from one end of one piece of intumescent wrap as shown.

3



Apply the intumescent wrap, starting from the top flat area, as highlighted in RED circle. Remove the rest of the release paper and apply the intumescent tightly around the letterplate sleeve.

4



Apply the second intumescent wrap as highlighted, ensuring a neat joint as shown - and continue to wrap fully around the sleeve.

5



Ensure there are 3 layers of intumescent on the bottom flat section of the sleeve. Now continue the installation from Point 3 in the fitting instruction