

Installation Base S4-700

Honeywell

Life Safety Systems




The base S4-700 is designed to accept the range of combined detection and alarm devices.


Specification

Ambient temperature	-20°C to +54°C
Storage temperature	-25°C to +70°C
Ambient humidity	<95% relative (non condensing)
Terminals	0.6mm ² to 2mm ²
Housing	ABS-V0
Colour	White (RAL 9010)
Weight	60g approximately
Dimensions	Depth 24mm x 115mm diameter

In - Out wiring to bases

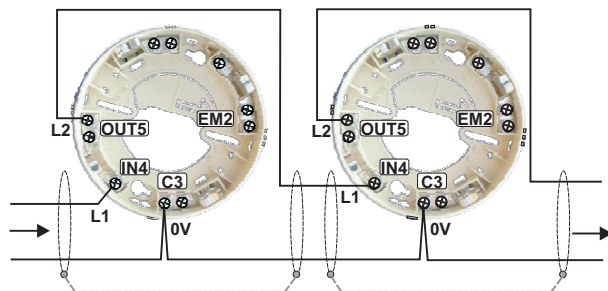


Dimensions and mounting

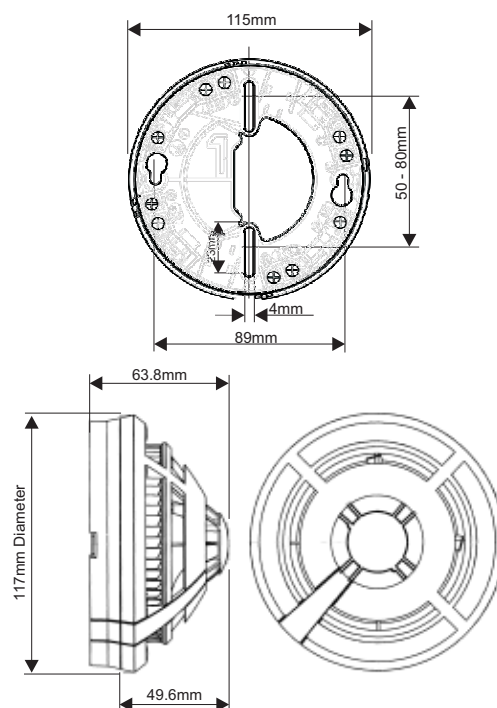


Wiring a Remote LED

Only one remote LED unit 13449-01 or SEN-LED can be wired to a base.

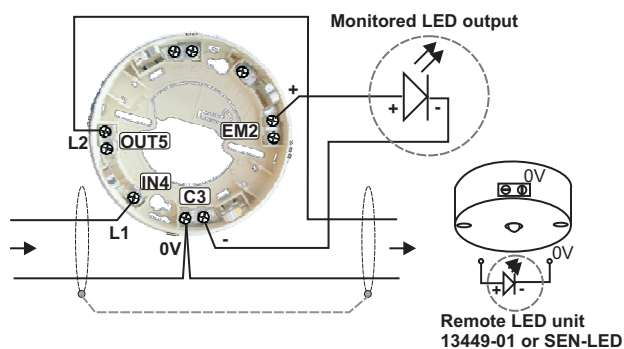


Wiring a monitored input

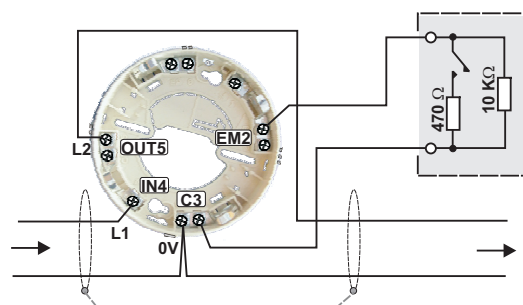


Metal back box

A metal back box must be used for base mounting. The earth continuity must be maintained throughout the whole loop. The earth must be securely connected to the metal back box.

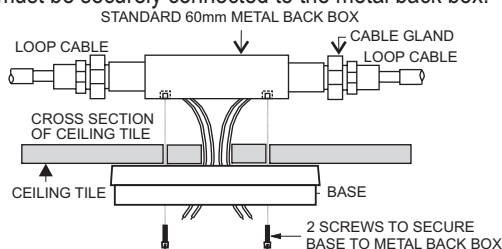


Do's and Don'ts

Earth wire should be terminated in the wiring junction box (e.g. BESA box) on which the base is mounted.

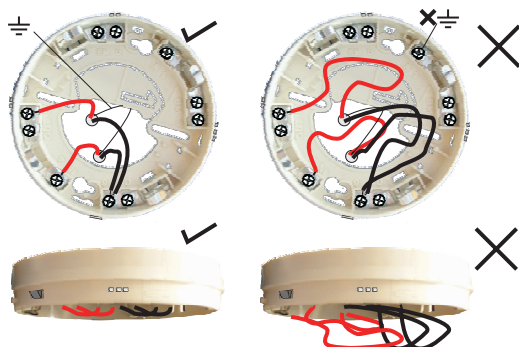


Wires should be of minimal excess length and be pushed back flat inside the base.

Remove cutout to ease wiring

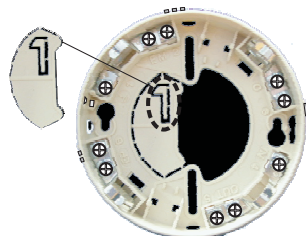

To fit Device to base

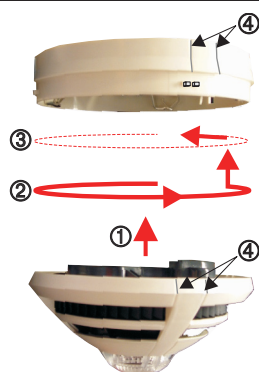


Offer device ① to base and rotate clockwise until it moves upwards on to the base ② and rotate again until it clicks and goes no further ③, the lines ④ on the base and device will align.

To remove device from base



Turn the device anticlockwise ① until it stops and ② remove from the base.

Fitting the locking peg

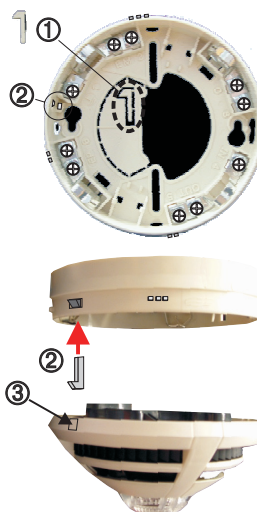

Remove the locking peg from cutout on the base ① and insert it in base ②. Pierce the pre-cut opening ③ in device.

To remove locked device from base



Push the locking peg in ① and turn device anticlockwise until it stops and then remove it from base ②.



If a device is locked in, it can only be removed by access to the locking peg as instructed. The standard removal / extractor tool cannot be used to remotely remove a locked device from base.

Honeywell Life Safety Systems (UK and Ireland) reserves the right to revise this publication from time to time and make changes to the content hereof without obligation to notify any person of such revisions or changes.

Honeywell Life Safety Systems	Hamilton Industrial Park, Waterside Road, Leicester LE5 1TN, UK		Websites: www.gent.co.uk www.smsfire.co.uk Fax (UK): Gent +44 (0)116 246 2300 SMS +44 (0)116 246 2316
	Telephone Gent +44 (0) 116 246 2000 SMS +44 (0) 116 246 2100		